

Simple User Manual

SAMCOM FPCN10A

Features

- With GROUP button
- Voice commander/scramb
- 20 Memory Channel
- VOX Sensitive settings
- With LCD Display
- Key Lock and Tone Setting
- Squelch tail elimination



 
Detail Display




Sancon Inc.


Get Familiar with the transceiver


- (1) PTT Transmitting
- (2) MONI (monitor) button
- (3) Scan/call button
- (4) Antenna
- (5) Channel selection knob
- (6) Power/volume switch
- (7) Speaker
- (8) Microphone
- (9) Status indicator
- (10) Battery release button
- (11) Earphone cap
- (12) LCD Display
- (13) Keys
- (14) Battery
- (15) Belt screw

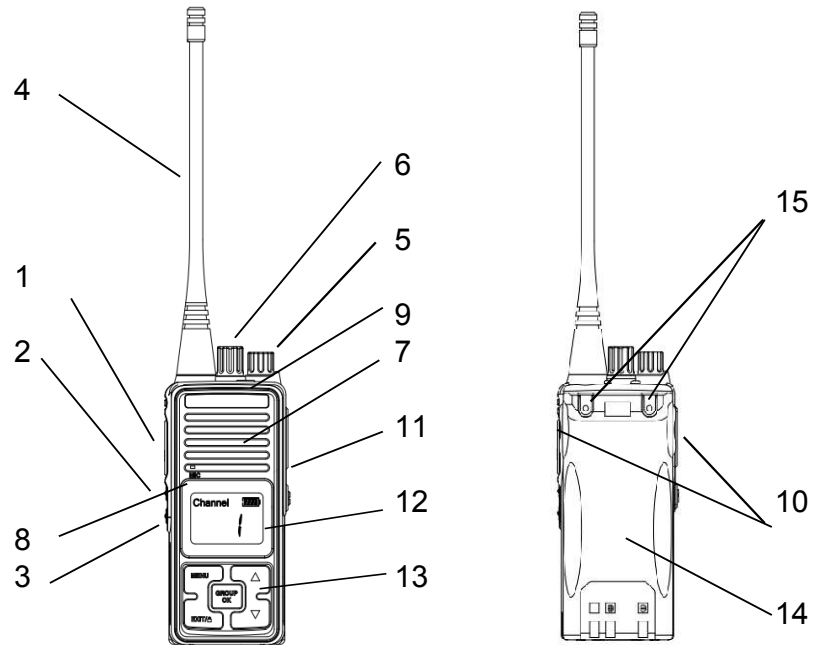

 Press the MENU key, enter into the menu selecting mor Press ▲ or ▼ key choice the function.

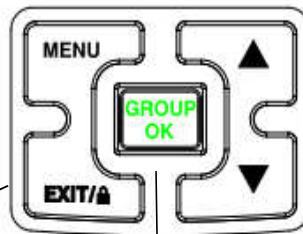

 Keep press 3 seconds the  key to l Press the **GROUP/OK** key to speak to all channel , open the key or Press the EXIT key to exit settir press the **OK** key to confirm the funct

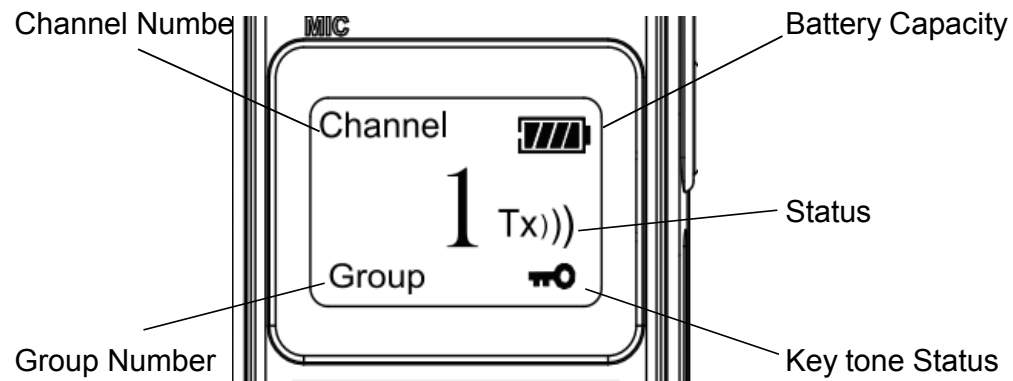

Operation Guide

b.Meun Selecting List

Item	Display	Description	Setting content
1	GRP	Group channel setting	0-19
2	VOX	Voice Operation	OFF 1-9
3	SQL	Squelch Level Selection	ON/OFF
4	BEP	Keypad Tone	ON/OFF
5	CMP	Voice Compression	ON/OFF
6	SCA	Scrambler Function	ON/OFF

1、GRP (Group Channel) Setting

After pressing MENU into function menu and **GRP** will be shown on display, press OK key then you can select 0-19 through by ▲ or ▼, then press **OK** key again the new GRP channel is fix. press the **EXIT** key to give up setting

2、 VOX Setting

After pressing MENU into function menu and choice **VOX**, press OK key then you can select 1-9 and off through by ▲ or ▼, then press **OK** key again, press the **EXIT** key to give up setting. Level 9 small voice can open transimt.

3、 SQL (Squelch Level Selection) Setting

After pressing MENU into function menu and choice **SQL**, press OK key then you can select 1-9 through by ▲ or ▼, then press **OK** key again, press the **EXIT** key to give up setting

4、 BEP (Keypad Tone) Setting

After pressing MENU into function menu and choice **BEP**, press OK key then you can select on/off through by ▲ or ▼, then press **OK** key again press the **EXIT** key to give up setting

5、 CMP (Voice Compression Function) Setting

After pressing MENU into function menu and choice **CMP**, press OK key then you can select on/off through by ▲ or ▼, then press **OK** key again press the **EXIT** key to give up setting

6. SCA (Scrambler Function) Setting

After pressing MENU into function menu and choice **SCA**, press OK key then you can select on/off through by ▲ or ▼, then press OK key again press the EXIT key to give up setting

Monitoring

To monitor, you need just hold down the MONI button and adjust the channel background noise to a comfortable level by rotating the PWR/VOL knob. It can directly monitor the channel you care without having to wait for your call, as long as the MONI button has been hold down.

Transmitting

First of all, hold down the MONI button and listen for a while to confirm the channel you wanted is not busy, and then speak normally to the microphone at the front of the transceiver, while holding down the PTT button. The transmission indicator turns red when the PTT button is pressed. If you speaks too loud or with your mouth getting too close with the microphone, it may distort the sound and reduce the signal clarity on the receiving side. Release the PTT button to listen

to the partner's voices.

Receiving

Release PTT key, transceiver enter the receiving mode, the status indicator lights green. Please adjust the volume appropriately to achieve the best listening effect.

Scanning

This feature is designed to catch signals on all channels. Press the scan/call button (press and hold for less than 2 seconds), the LED indicator flashes green, it will scan all the channels in the scan queue one by one in order. When a channel receives a signal, the LED indicator will turn green for long. When the function is activated, the transceiver will check whether there are calls on the channels that are set to be scanned. If a channel is tested to have signals on it, it will switch to this channel in order to receive voices (which channels can be scanned is programmed and set by Users).

Low Battery Warning

Low battery warning happens at the time when the battery needs charging or replacement. If the battery is low, the transceiver indicator light turns red and blinks, and a beep sound can be heard every 5 seconds. At this time, please replace the battery.

Voice Operated Transmitting (VOX)

This feature is designed to trigger the transmitting of voice by voice itself. Users can choose to turn on or off the VOX feature, and set the sensitivity of VOX through Meun. With this feature, transmitting operation is launched by the voice you said without having to press the PTT button. The transmitting operation stops as soon as the end of the talk.

Call function

Hold down the scan/call button for 2 seconds, the transceiver will send out a specific sub-tone that your companion transceiver will ring prompted a call.

Voice compression and expansion

This feature ensures the user in a variety of noisy environments can get a clear call. Set by the Users in the channel through Meun

Scrambler

This feature is voice encryption, user no such feature can not receive the real voice, so makes your call be kept confidential. This feature may be set by Users in the channel through Meun